

# Greedy Gorilla

## Contents:

4 playing boards, 24 healthy food cards, 8 junk food cards, 1 gorilla posting box (batteries included)

## Object

To be the first player to fill a playing board with food cards that make up a healthy meal.

## To play

- Each player chooses a playing board.
- The healthy food and junk food cards are shuffled and spread out face downwards on the table.
- The youngest player begins by picking up a card.
- If the food on the card matches a food picture on their playing board, the player places the card on the square on their board.
- If a player picks up a healthy food card that is not on their playing board, they cannot use it and must put it back face downwards on the table.
- If the player picks up a junk food card, which is illustrated with a yellow background, they must post it into the greedy gorilla's mouth to make him burp. When the greedy gorilla burps, all players should put a hand to their mouth and say, "Excuse me!"
- Play then passes to the person on the player's left.
- Play continues until one player has filled their playing board.

## The winner

The winner is the first player to match all the healthy food cards to their playing board.

## Note

- When eaten in moderation, the foods depicted on the junk food cards can form part of a balanced diet.
- Do not give foods to animals that they do not normally eat.
- Please note that the most effective way to make the gorilla burp is to push the card into his mouth horizontally, ensuring that it makes firm contact with the trigger.

## Activation Instructions

- Activation of the sound module in Greedy Gorilla must be carried out by an adult.
- When using Greedy Gorilla for the first time, you must turn the posting box upside down and remove the plastic isolator tab from the bottom of the sound module.
- You must then turn the sound module on using the switch on the right side of the posting box. Please note that the gorilla will burp once each time the switch is moved to the ON position.
- When the sound module is turned on, the gorilla will automatically burp whenever an object is inserted into his mouth.
- Once the game has ended, move the switch to the OFF position to save battery power.

## Battery Requirements

- Requires 3 x AAA 1.5V batteries (included). Alkaline batteries are recommended.
- When battery power is low, remove all 3 batteries and replace with 3 new batteries.

## Battery Replacement

- Battery removal and replacement must be carried out by an adult.
- To access the battery compartment, please follow these instructions:
  1. Lift open the top flap of the posting box.
  2. Push the back of the posting box up and gently pull it out to open the posting box.
  3. Using a small Phillips-head screwdriver, remove the screw from the battery compartment door. The screw is very small, so please remember to keep it safely.
  4. Open the battery compartment door.
  5. Remove all 3 batteries and insert 3 new batteries.
  6. Reverse steps 1-4 to seal the battery compartment and reassemble the posting box.
- Batteries should be inserted with the correct polarity, observing (+) and (-) marks on the batteries and product.
- Only use batteries of the same or equivalent type to those recommended.
- Avoid short-circuiting the terminals in the battery compartment, or the battery terminals.
- Do not mix old (used) batteries and new batteries, or batteries of different types (e.g. alkaline and rechargeable).
- Remove exhausted batteries from the toy, as battery leakage and corrosion may damage this toy.
- Remove batteries if storing the product for long periods of non-use.
- Dispose of exhausted batteries safely and never dispose of batteries in a fire.
- Never attempt to recharge non-rechargeable batteries.
- Always remove rechargeable batteries before being charged. Removal and recharging of rechargeable batteries must be carried out by an adult.

